

**BWD1200SS  
Washer dryer**

**Instruction manual**



# USER MANUAL FOR YOUR BAUMATIC

## BWD1200SS Washer dryer



  
**Baumatic®**

*You will be mine ...*

***NOTE:*** This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference; for you or any person not familiar with the operation of the appliance.


# Contents

<b>Environmental note</b>	4
<b>Important safety information</b>	5 – 6
<b>Specifications</b>	7
Description of the appliance	8
Control panel	9
Program options	9
Wash program indicator neons	10
Wash program control knob	10
Drying timer control knob	10
Detergent drawer	11
<b>Preparing the wash cycle</b>	12
Preparing your garments for washing	12
A selection of wash care symbols	13
Detergents and conditioners	14
<b>Wash program table</b>	15
Selecting a wash program	16
Selecting a separate drying program	17
Selecting an automatic wash and dry program	18
Cancelling or pausing a wash program	19
<b>Maintenance and cleaning</b>	20
In daily use	20
Control panel and washer dryer cabinet	20
Detergent drawer	20 – 21
The washer dryer drum	21
Door	21
Poor wash results	22
Cleaning the drain pump filter	23 – 24
Winter storage	24
Removing stains	25
Stain removal rules	25
Stain removal guide	26
<b>Installation</b>	27 – 32
Unpacking the machine and removing the transit bolts	27 – 28
Positioning and levelling the appliance	28 – 29
Connecting to the mains water supply	29 – 30
Water outlet	30
Power supply	31
Before first use maintenance wash	32
<b>Troubleshooting chart</b>	33 – 34
General troubleshooting	35
<b>Contact details</b>	36

## ENVIRONMENTAL NOTE

**Note:** Before discarding an old appliance, switch off and disconnect it from the power supply. Cut off and render any plug useless. Cut the cable off directly behind the appliance to prevent misuse. This should be undertaken by a competent person. Disable the door lock to make sure that children cannot get stuck inside the appliance.

This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



## IMPORTANT SAFETY INFORMATION



Your safety is of the utmost importance to Baumatic. Please make sure that you read this instruction booklet **before** attempting to install or use the appliance. If you are unsure of any of the information contained in this booklet, please contact the Baumatic Technical Department.

### General Safety

- Repairs to your appliance must only be carried out by a Baumatic engineer or one of its authorized service agents. Any attempt by an inexperienced person to repair the appliance, could result in injury or damage to your washing machine.
- If you notice that the mains cable is damaged. **The appliance must not be used.** The same applies if you notice that the worktop, control panel or base area is damaged. As this could allow access to the internal components of the machine.
- The appliance should be turned off and isolated from the mains supply, before either cleaning or maintenance work is attempted.
- The mains cable must not be used to pull the plug out of the electrical socket.
- The machine should not be sprayed with water.
- The glass of the porthole door may become hot during the higher temperature wash programs.
- The machine should be allowed to cool before carrying out an emergency drain or cleaning the drain filter.
- It is possible for small animals to chew either mains cables or water hoses, which could cause an electric shock hazard.

### Installation

- The installation instructions contained within this user manual should be followed.
- It is obligatory for the completed installation to comply with all relevant building regulations and local water authority requirements.

- **Before the first use of the appliance, we advise that a 90 °C cotton wash is completed. No garments should be placed inside the machine; however a small amount of detergent must be used.**

## **During Use**

- It is recommended that the appliance is unplugged and the water supply is turned off after the machine is used.
- This appliance is only designed to wash normal domestic washloads. If you use your washing machine in any other way or it is incorrectly used, then Baumatic accepts no liability for any damage that might be caused and any guarantee will be void.
- No attempt should be made to alter or modify the specifications of this appliance.
- The detergents that you place in this appliance should be suitable for automatic washing machines. With regards to dosage levels, the detergent manufacturer's recommendations should be followed.
- You should not wash garments that have been in contact with flammable materials.
- Your washing machine should not be used for dry cleaning.
- If you use either dyes or bleaching agents inside this machine, then you should consult with the manufacturer of these products to make sure they are suitable for use in your washing machine. Baumatic cannot be held responsible for any damage that may result.

## **Child Safety**

- Your washing machine should only be used by adults. You should not allow children in the area of the machine unsupervised. You should not let them touch the controls or play with the appliance.
- It could be possible for a child or pet to gain access to the washing machine through the porthole door. Therefore please check the drum before using the appliance.
- Any packaging that is removed from the machine should be kept away from children.
- All detergents should be kept out of children's reach in a safe place.

## Specifications

- ✓ 19 wash programs
- ✓ 6kg wash load/kg drying load
- ✓ 1200 rpm maximum spin speed
- ✓ LED indicating programs, function and wash cycle progress.
- ✓ 170 Minute drying time knob
- ✓ Eco carbon tub
- ✓ Maxi porthole
- ✓ Automatic consumption reduction
- ✓ Anti foam system
- ✓ Overflow protection
- ✓ Safety door lock
- ✓ Electronic balance load control
- ✓ Adjustable feed
- ✓ **2 Option buttons:**      Extra rinse  
   Pre wash


### Appliance dimensions

Height:      850 mm  
Width:        595 mm  
Depth:       550 mm

### Energy efficiency

Energy efficiency class              B  
Wash performance class             A


## Description of the appliance

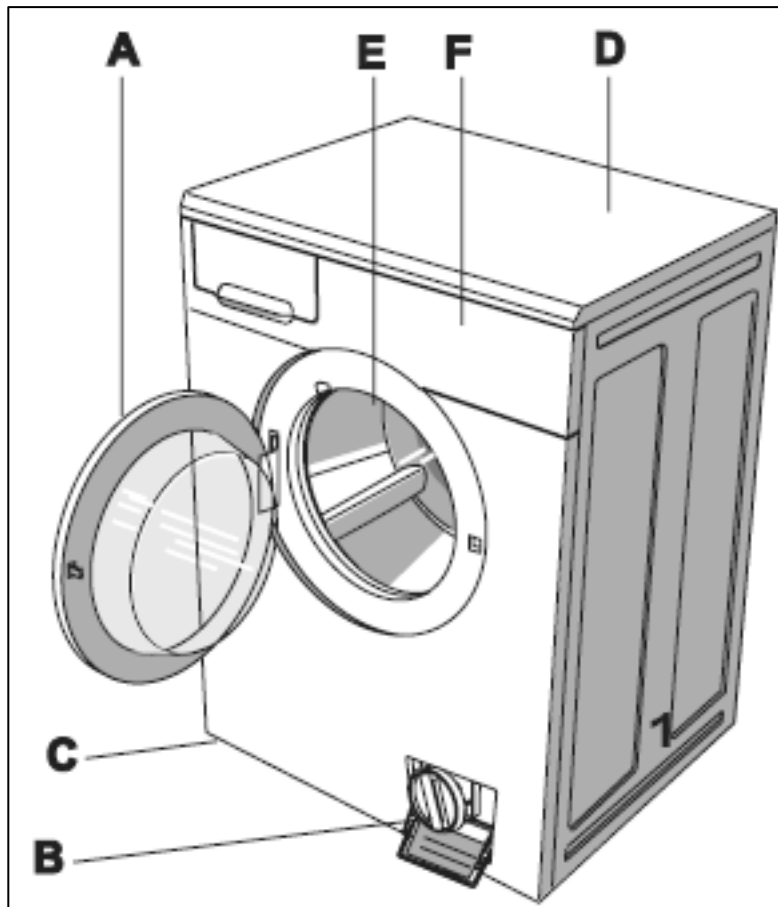

- A** - Glass porthole door
- B** - Filter
- C** - Adjustable feet
- D** - Top cover
- E** - Drum
- F** - Control panel



## Control panel

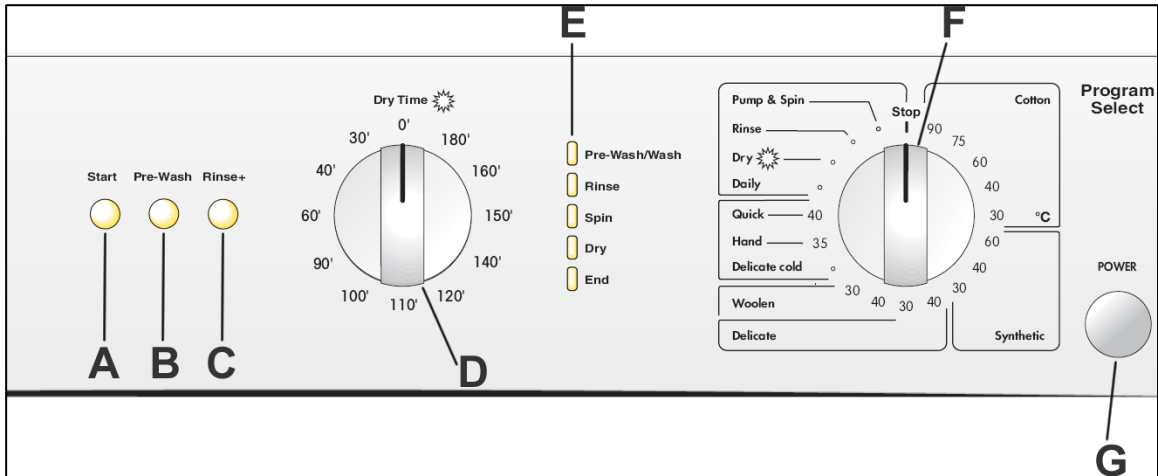

- A** - Start button
- B** - Pre wash button
- C** - Additional rinse button
- D** - Drying timer control knob
- E** - Wash program indicator neons
- F** - Wash program control knob
- G** - On/Off button

### Wash program control knob

This control knob allows you to select the wash program of your choice.

### Start button

Once a wash program has been selected, this button should be pressed to start the wash cycle.

### Program option buttons

**These buttons need to be pressed after a wash program has been selected, but before the wash program has been started. If you select a different wash cycle after pressing a program option, it will need to be reselected.**

**Prewash:** This option will perform a prewash before the main wash cycle at 40°C. It will only work on the cotton and synthetic wash programs. When this is used, detergent must be added to the prewash compartment in the detergent drawer.


**Extra rinse:** This option increases the level of the final rinse for the selected wash program. This should be selected if large loads are being washed or the garments belong to somebody who has sensitive skin. This option will increase the amount of water the appliance uses.

## Wash program indicator neons




- During the wash cycle, the relevant wash program indicator neon will light, to advise what stage of the wash program the machine has reached.

## Wash program control knob

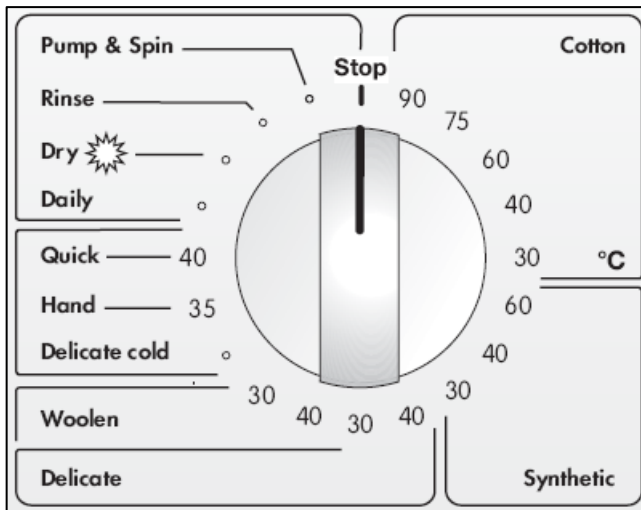


- Turn this dial to select the wash or drying program that you require.

## Drying timer control knob

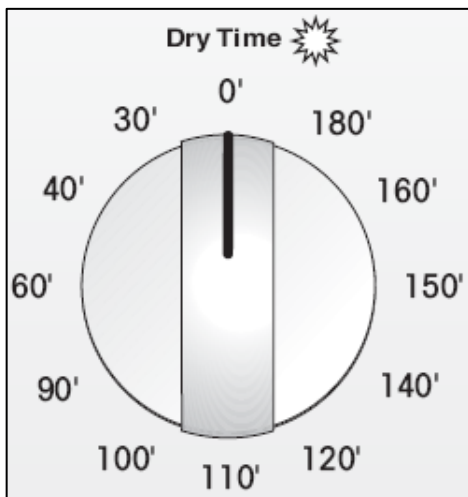

- Turn this dial to select the drying time that you require.

## Detergent drawer

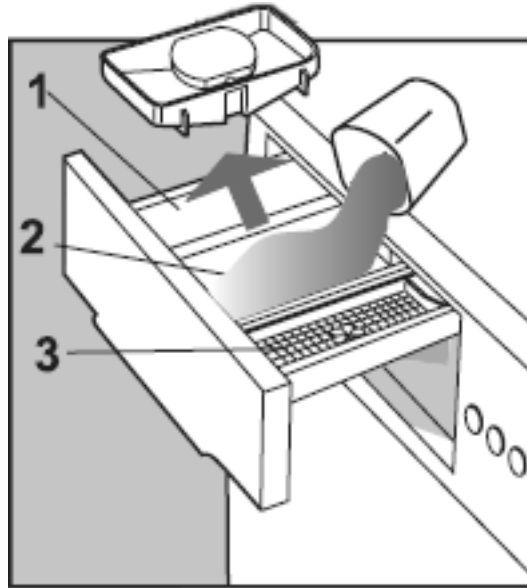

### 1) Pre wash section

This compartment should have detergent placed in it, if you are going to select a wash program that has a pre wash as part of it.

### 2) Main wash section

This compartment should have detergent placed in it (you should also put a water softening agent in this section, if you use one). The detergent will be added to the drum at the start of the main wash program.


### 3) Conditioner section

This compartment should be used for liquid conditioners (fabric softener, starch). They will be added to the wash load during the final rinse.


## Preparing the wash cycle

### Preparing your garments for washing


- Your washing should be sorted out, according to the fabric type and the wash care symbol that is printed on the garment's wash care label. (see separate section on wash care symbols).

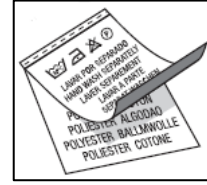

- Your washing should also be sorted out according to the degree of soiling.

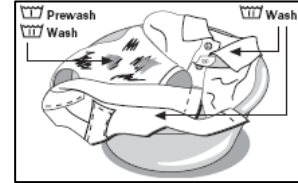

- Check all pockets on a garment to make sure that they are empty.
- Remove any detachable metal items (badges, paperclips, safety pins etc).

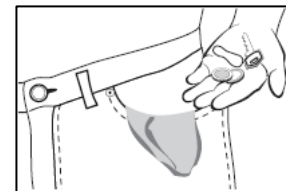








 


 


 










- Zips should be closed, duvet covers and pillow cases should be buttoned up and any loose straps should be tied up. This will help to prevent other garments from getting damaged during the wash.
- Woollens and knitted coloured fabrics should be turned inside out before being washed in the appliance.
- Small delicate items (tights, baby socks) should be placed in either a washing net or a zipped pillow case.
- Curtains should be handled with particular care. All plastic hooks or metal strips must be removed before being washed in the appliance.
- Coloured items and whites should be washed in separate wash cycles.



- New garments often contain an excess of dye, therefore it is advisable to wash them separately for their first wash.
- Garments should be unfolded and shook out before being placed inside the machine.

## A selection of wash care symbols

	Normal wash		Iron at up to max 200°		Dry flat
	Delicate wash		Iron at up to max 150°		Dry hanging
	Wash at max 95°C		Iron at up to max 100°		Dry on hanger
	Wash at max 60°C		Do not iron		Dry in tumble dryer at normal temperature
	Wash at max 40°C		Dry-clean using solvent		Dry in tumble dryer at low temperature
	Wash at max 30°C		Dry-clean using benzine, pure alcohol and R113 only		Do not tumble-dry
	Hand wash		Dry-clean using ethyl perchlorate, benzine, pure alcohol, R111 and R113.		Do not dry-clean
	Dry-clean only				
	Bleach in cold water				
	Do not bleach				

- The wash care symbols should be used to help you to select the most suitable wash program. They will also help you to sort your laundry into different loads, depending on the fabric type and the highest temperature which the garment can be washed at.
- If the wash care label does not appear in the above table, then please refer to the washing machine program chart. This gives more detailed descriptions of the types of fabric that are suitable to be washed using a particular wash program.


## Detergents and conditioners

The amount of detergent that you need to use in your appliance, will depend on

- **The degree of soiling.** Lightly soiled garments in general require less detergent.
- **The size of the wash load.** A smaller wash load will require a reduction in the amount of detergent.
- **The hardness of your tap water.** The harder your water is, then the more detergent you will need to use. The detergent manufacturers normally give guidance as to how much extra detergent should be used, depending on the hardness of the water.

### Liquid detergent

If you are using liquid detergent, then in the majority of cases the liquid should be placed inside the dosing device supplied by the detergent manufacturer. All instructions on the detergent packaging should be followed.

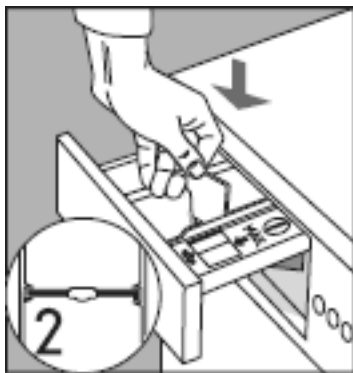

If you are going to use liquid detergent in the soap drawer, then you must insert the dividing section into the detergent drawer.

The liquid detergent should be poured into the front section of the drawer.

### Water softening agents

If your tap water is hard, then it may be prudent to utilise a water softening agent. This will help to ensure that the appliance does not become clogged with hard water deposits. You may also find that it will allow you to lessen the amount of detergent that you are using.



**When using any detergent or water softening agent, the recommendations of the manufacturers should be followed.**

# Wash program table

PROGRAM SELECTOR	WORKING TEMPERATURE	LABEL LINGS	TYPES OF FABRICS	Detergent compartments	BUTTONS ENABLED		
					Pre-Wash	Plus Rinses	Dryer
COTTON	90°		Heavily soiled white cotton fabrics, with stains also of an organic nature.		●	●	●
COTTON	75°		For very dirty sheets, shirts, tablecloths, towels made of resistant fabrics		●	●	●
COTTON *	60°		For very dirty sheets, shirts, tablecloths, towels made of resistant fabrics		●	●	●
COTTON	40°		Heavily soiled resistant whites and coloureds		●	●	●
COTTON	30°		Fabrics with delicate colours slightly dirty laundry		●	●	●
SYNTHETICS	60°		Heavily soiled synthetic fabrics with resistant colours		●	●	●
SYNTHETICS	40°		Lightly soiled synthetic fabrics with delicate colours		●	●	●
SYNTHETICS	30°		Lightly soiled synthetic fabrics with delicate colours		●	●	●
DELICATES	40°		Delicate cotton fabrics viscose and mixed delicates		○	○	○
DELICATES	30°		Delicate cotton fabrics viscose and mixed delicates		○	○	○
WOOL ***	40°		Machine washable woollen fabrics		○	○	○
WOOL	30°		Machine washable woollen fabrics		○	○	○
WOOL DELICATES	COLD	—	Machine washable woollen fabrics		○	○	○
QUICK WASH	35°		Lightly soiled delicate cotton fabrics viscose and mixed delicates, 35/40 min wash		○	○	●
DAILY WASH	40°		Delicate cotton fabrics delicate coloureds slightly dirty of daily use		●	●	●
COLD WASH	COLD	—	Delicate fabrics		○	●	●
DRY	—	—	For manual drying		○	○	●
RINSES	—	—	To rinse and freshen the laundry		○	●	●
DRAIN AND SPIN	—	—	Final drain and spin		○	○	●

OPTIONAL WITH THE PRE-WASH BUTTON PRESSED. ● FUNCTION ENABLED ○ FUNCTION DISABLED

(\*) Program for wash and energy consumption assessment, in accordance with standard EN60456 (press intensive wash button).

## Selecting a wash program

- ✓ Load your laundry and put detergent in the relevant compartment(s) of the soap drawer.
- ✓ Close the porthole door firmly.
- ✓ Switch on the appliance using the On/Off button, the Start button will flash.
- ✓ Select the most appropriate wash program for the garments that you are washing, by turning the wash program control knob to the most suitable program.
- ✓ Select any program options that you require, by pressing the relevant program option button. The button will light up if a program option is selected.
  - Any program option that you select, will affect the length of time that the wash cycle will take to complete.
  - A particular program option can only be selected if the program table advises that it is possible with the wash cycle you have selected.
- ✓ Press the Start button, the button will light; to show that the wash cycle has begun.
  - After approximately 5 seconds, you will hear your washing machine start the wash cycle.
  - Whilst the wash program is in progress, the wash program indicator neons will light. They will show you what stage of the program the appliance has reached.
  - After the spin cycle has completed, the SPIN LED will stay lit for two minutes. **IMPORTANT:** There is a door lock mechanism that stays engaged during this period of time. You should not attempt to open the porthole door during this time.
  - When it is possible to open the door, the END LED will light. At this point you should switch the machine off using the On/Off button. You can then open the porthole door and unload the garments that you have washed.



## Selecting a separate drying program

**IMPORTANT: Do not exceed the maximum loads listed in the table below when drying.**

FABRIC	WASH LOAD	DRYING RESULT	TIME
 COTTON AND LINEN	3.0 Kg	Ready to tidy away	140'
 COTTON AND LINEN	3.0 Kg	Ready to iron	120'
 COTTON AND LINEN	3.0 Kg	Ready to re-dry	110'
 COTTON AND LINEN	1.5 Kg	Ready to tidy away	100'
 COTTON AND LINEN	1.5 Kg	Ready to iron	90'
 COTTON AND LINEN	1.5 Kg	Ready to re-dry	60'
 SYNTHETICS	1.5 Kg	Ready to tidy away	90'
 SYNTHETICS	1.5 Kg	Ready to iron	60'

The timings in this table are approximate and refer to a wash load that has been spun at the maximum spin speed appropriate for that fabric type.

- ✓ Load your laundry and then close the porthole door firmly.
- ✓ Turn the drying time control knob clockwise, to select a suitable drying time for the garments that you wish to dry.
- ✓ Turn the wash program control knob clockwise to the DRY position.
- ✓ Press the On/Off button and then press the Start button to get the drying cycle to commence.
- Whilst the drying cycle is in progress, the DRY LED will remain lit.
- During the last ten minutes of the drying cycle, the DRY LED will flash on and off. This is to indicate that the cooling phase of the drying cycle has been reached.
- When the drying cycle has completed, you should not attempt to open the door of the appliance until the END LED is lit. At this point you should switch the machine off using the On/Off button. You can then open the porthole door and unload the garments that you have dried.



After you have completed a drying cycle, with particular garments there may be some threads left on the inside of the drum. To prevent transfer of these threads onto the next washload, we would recommend that you select a separate rinse and drain cycle before washing more garments.

## Selecting an automatic wash and dry program

- ✓ Load your laundry and then close the porthole door firmly.
- ✓ Turn the drying time control knob clockwise, to select a suitable drying time for the garments that you wish to dry.
- ✓ Select the most appropriate wash program for the garments that you are washing, by turning the wash program control knob to the most suitable program.
- ✓ Select any program options that you require, by pressing the relevant program option button. The button will light up if a program option is selected.
- Any program option that you select, will affect the length of time that the wash cycle will take to complete.
- A particular program option can only be selected if the program table advises that it is possible with the wash cycle you have selected.
- ✓ Press the Start button, the button will light; to show that the wash cycle has began.
- After approximately 5 seconds, you will hear your washing machine start the wash cycle.
- Whilst the wash program is in progress, the wash program indicator neons will light. They will show you what stage of the program the appliance has reached.
- Whilst the drying cycle is in progress, the DRY LED will remain lit.
- During the last ten minutes of the drying cycle, the DRY LED will flash on and off. This is to indicate that the cooling phase of the drying cycle has been reached.
- When the drying cycle has completed, you should not attempt to open the door of the appliance until the END LED is lit. At this point you should switch the machine off using the On/Off button. You can then open the porthole door and unload the garments that you have dried.
- **IMPORTANT: If you select a wash and dry program, your wash load must not be over 3 kg for cottons wash programs and 1.5 kg for synthetics wash programs.**

## Cancelling or pausing a wash program

- ✓ To stop a wash program once a wash cycle is in progress, you should turn the wash program control knob to the STOP position.
- The appliance will go onto PAUSE status and the wash program will be cancelled.
- At this stage you can either reselect a different wash program by turning the wash program control knob to the one that you require.
- **IMPORTANT:** You should only select a new wash program if the previous program was only a short way through the cycle.
- Alternatively you can turn the wash program control knob to the SPIN position, to get the washer to pump out any water that may be in the drum.
- After the spin cycle has completed, the SPIN LED will stay lit for two minutes. **IMPORTANT:** There is a door lock mechanism that stays engaged during this period of time. You should not attempt to open the porthole door during this time.
- When it is possible to open the door, the END LED will light. At this point you should switch the machine off using the On/Off button. You can then open the porthole door and unload the garments that you have washed.



**Before opening the porthole door, you MUST select the SPIN program. Otherwise there may still be water in the drum when you open the door.**

## Maintenance and cleaning

### In daily use

- ✓ Once a wash cycle has completed, you should pull out the detergent drawer slightly, so it can dry out.
- ✓ Leave the porthole door ajar for a short while after a wash cycle has completed. This should help to prevent stagnant smells and to protect the door seal.
- ✓ Close the water tap.
- ✓ We suggest that you disconnect the appliance from your mains supply, when it is not in use.


### Control panel and washer dryer cabinet.

**IMPORTANT:** Do not use any abrasive cleaner or household polish on either the control panel or operating parts.


- ✓ Wipe over the control panel and the external surface of the machine using a brand new damp cloth with warm water.
- ✓ If you ever spill any liquid detergent or conditioner from the detergent drawer onto the washing machine cabinet, then these should be cleaned up immediately as they could be corrosive.

### Detergent drawer

Occasionally the detergent drawer should be cleaned.

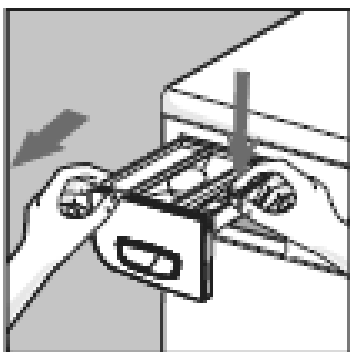

- Pull the detergent drawer a little way, then push down the tab that is on the right hand side of the drawer. Whilst still holding down the tab, pull out the drawer until it slides out fully.

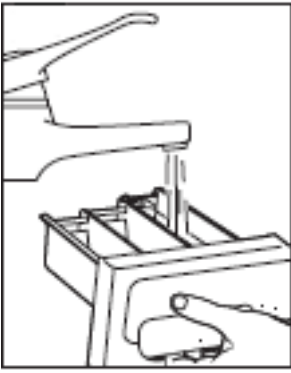

- Use warm water and a brush to thoroughly clean the three compartments of the detergent drawer.

- Clean the area that the detergent drawer slides into with a brush.
- Replace the detergent drawer by placing it back into the slot. Then push the drawer fully back into position.

### **The washer dryer drum**

The drum of your washer dryer is constructed from stainless steel. However if there are objects that can rust placed inside the drum, then it is possible for the drum to become stained.

**IMPORTANT:** Do not use a descaling agent, iron/steel wool or scouring agents to clean the drum of your appliance.

- ✓ Remove any rust stains on the drum with an appropriate stainless steel cleaning agent.

### **Door**

- ✓ You should regularly check to see if any deposits have formed, or there are any foreign bodies in the rubber door gasket. This sits inside the opening of the porthole door.



**My garments are looking grey and there are limescale deposits present in the drum of my washer dryer.**

- There is not enough detergent being added.
- The incorrect detergent is being used.
- Stains are not being pre-treated.
- The correct wash program or wash temperature was not selected.



**I have followed the advice given above, but my garments are still coming out with grey stains on them.**

- The garments are soiled with oils, ointments or grease and were washed without enough detergent.
- The wash temperature selected was too low.
- Fabric conditioner has come into contact with the garments. If this happens try to wash out these stains as quickly as you can and try to avoid getting conditioner on the garments in future.



**After the final rinse, I can still see foam.**

- Modern detergents can result in there still being foam in the final rinse, this does not mean that the washing is not being rinsed properly.



**There is white residue on my garments when I remove them from the appliance.**


- Modern detergents can contain insoluble contents, and white residue after a wash cycle is not necessarily a sign of the garments not being rinsed properly.
- You should shake out the garment or brush it off. In future possibly turn the garment inside out before it is washed. You may wish to move from a powder detergent and switch to a liquid detergent instead.

## Cleaning the drain pump filter



**IMPORTANT:** Switch off your washer dryer and disconnect the plug from your mains supply.


You should clean out the filter approximately every twenty washes. If the drain pump filter is not cleaned regularly, then your appliance may find it difficult to pump out water efficiently.

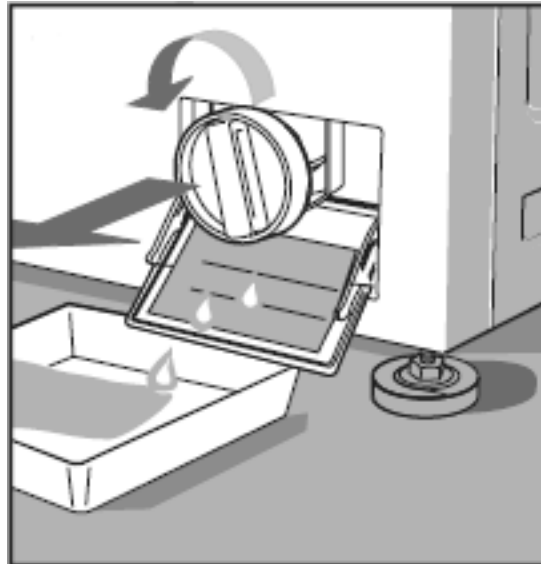


- Open the flap that covers the filter.
- Place a shallow dish underneath the flap, this will catch any water residue that comes out of the machine when the filter is opened and removed.



- Turn the filter a quarter turn anti clockwise, water will start to come out of the drain pump. Continue to turn the filter anti clockwise until you reach a half turn, more water will come out of the drain pump.

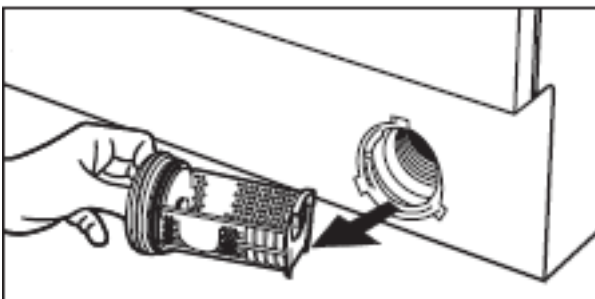

- When all the water has drained out of the washing machine, turn the filter several times anti clockwise, until it can be removed completely.

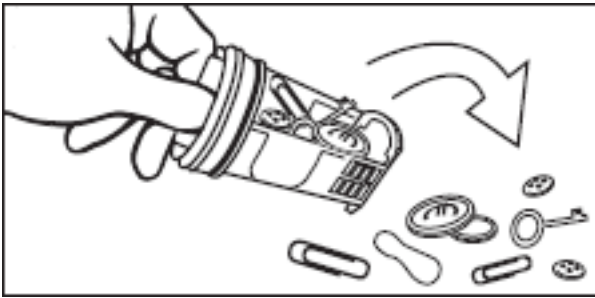

- Remove the filter and rinse out the filter under the tap. Remove any debris from the filter.

- Remove any debris that is in the area of the appliance that you removed the drain pump filter from.
- Screw the filter clockwise back into position, making sure that it is fully tightened. You should keep turning until you cannot turn it any further.
- Shut the filter flap.
- **IMPORTANT: Do not perform this operation if the appliance has stuck on a cycle, until the water inside the machine has cooled sufficiently. Otherwise the water that comes out of the drain pump filter may still be hot.**

### Winter storage

- You should install your appliance in a location where it will not be subjected to freezing temperatures.
- If you are going to store your appliance in a location where the temperature will drop below freezing in winter, then you should follow the table below.

To winterize washer	To use washer again
<ul style="list-style-type: none"> <li>• Disconnect from mains water supply.</li> <li>• Disconnect and drain the water inlet hose.</li> <li>• Run the washing machine on a drain or spin setting for 1 minute.</li> <li>• Unplug the power supply cord.</li> </ul>	<ul style="list-style-type: none"> <li>• Flush water pipes and hoses.</li> <li>• Reconnect water inlet hose.</li> <li>• Reconnect to water supply.</li> <li>• Reconnect power supply cord.</li> <li>• Reconnect water outlet hose.</li> </ul>



## Removing stains

*Garments that are covered in stains, grease or are heavily soiled may need to be pre-washed or soaked before being placed inside of the washing machine.*

- Soaking helps to remove protein-type stains, like blood, milk or grass.
- Pre-washing helps to loosen soil before the main wash.

## Stain removal rules

- Use warm water for soaking or pre-washing stained laundry. Hot water can set stains.
- Most stains are easier to remove when they are fresh.
- Before treating any stain try to establish; what kind of stain it is, how old the stain is, what the fabric type is and whether the fabric is colourfast (check the care label to find this out).
- Washing and drying can fix some stains.
- When bleach is recommended, use a mild fabric bleach that is safe for the fabric.
- If you need to use a stain remover, put the stained area face down on a paper towel or white cloth. Apply the stain remover to the back of the stain. This forces the stain off the fabric, instead of through it.

## Stain removal guide


STAIN	TO REMOVE
Blood	Rinse immediately in COLD water. If the stain remains, soak in cold water with an enzyme pre-wash.
Chewing gum	Use ice in a plastic bag to harden the gum. Scrape off what you can and then sponge with white spirit.
Chocolate/ Cocoa	Sponge with COLD water and then soak in an enzyme pre-wash. If stains persist, rub in a little detergent and then rinse in cold water.
Coffee	Blot up quickly and then rinse out in COLD water. Rub in a little detergent and then machine wash at the maximum temperature allowed according to the wash care label.
Cream/Milk Ice cream	Rinse in COLD water and wash normally. If the stain is still apparent, sponge with white spirit.
Deodorant	Rub the affected area with white vinegar and then rinse out in COLD water. Sponge with white spirit. Treat stiffened areas with an enzyme pre-wash.
Egg	Soak in a COLD enzyme pre-wash, rinse and wash normally.
Fabric softener	Rub the affected area with a bar of soap and then wash normally.
Fruit stains	Treat as soon as possible by sponging with COLD water. Rub a little detergent on the stain and then wash normally.
Grass	Sponge with white spirit. Rub in an enzyme pre-wash and then wash normally.
Grease and oil	Lay the affected area facedown on an absorbent cloth. Using white spirit or dry cleaning fluid, work on the back of the stain. Wash normally.
Iron or rust	Apply lemon juice and salt, and then place in the sun. Wash normally.
Lipstick	Sponge with white methylated spirit and wash normally.
Mildew	Wash in WARM water and detergent. Moisten area with lemon juice, dry in the sun and wash normally. If the stain persists and the fabric is suitable, use a mild fabric bleach.
Mud	Brush off any dry mud. Rinse in COLD water. If the stain persists, rub in a little detergent and wash normally.
Oil based paint	Scrape off any fresh paint and then sponge off with non flammable dry cleaning fluid and wash normally.
Water based paint	Treat whilst still wet, rinse in WARM water and wash normally.
Scorch marks	Dampen a cloth with hydrogen peroxide, lay it over the affected area and press with a fairly hot iron.

## Installation




**IMPORTANT: THIS INSTALLATION MUST BE COMPLETED BY A SUITABLY QUALIFIED PERSON. BAUMATIC ONLY SANCTION THE INSTALLATION GIVEN IN THIS INSTRUCTION MANUAL. YOU SHOULD KEEP THE TRANSIT PACKAGING, IN CASE YOU NEED TO TRANSPORT THE MACHINE IN THE FUTURE.**

### Unpacking the machine and removing the transit bolts

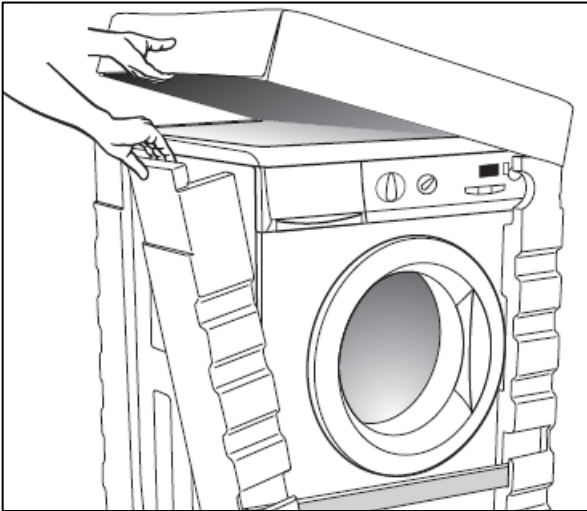


- ✓ Remove any of the external packaging on the appliance.

- ✓ Locate the four transit bolts that secure the drum in position, whilst the appliance is being transported.

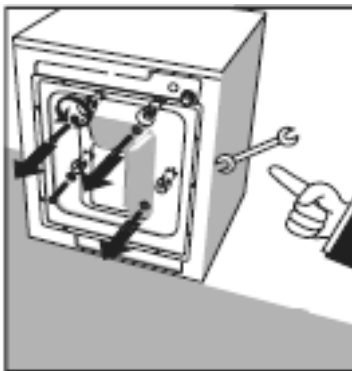

- ✓ Using a spanner, loosen and remove the four transit bolts.

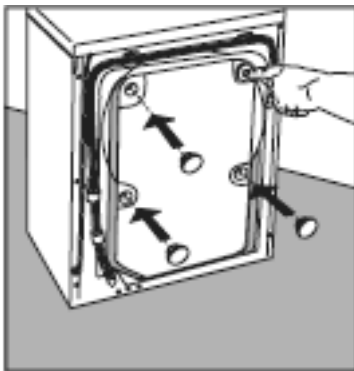


- ✓ There are four plastic covers that should be placed in the holes where the transit bolts were removed from.


**IMPORTANT:** The transit bolts **MUST** be removed before your washing machine is used for the first time.

### Positioning and leveling the appliance


- ✓ Place the washing machine on a solid and level floor surface.
- ✓ **DO NOT PLACE THE WASHING MACHINE ON A CARPET.**

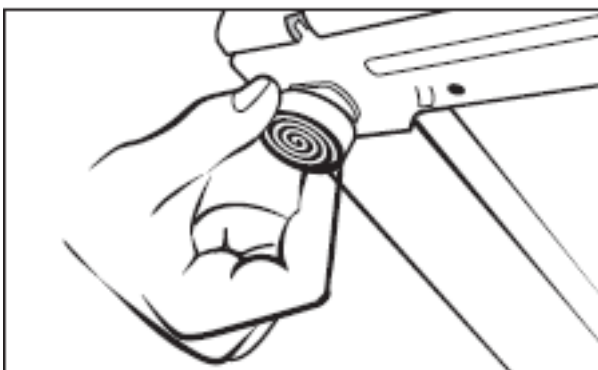


- ✓ Loosen the adjustable feet that are positioned on the base of the appliance.

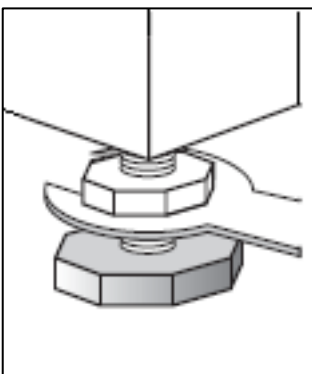

- ✓ Slacken off the lock nut on each of the washing machine feet using a spanner.

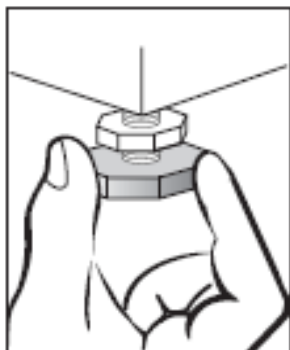



- ✓ Adjust the feet to level off the washing machine.

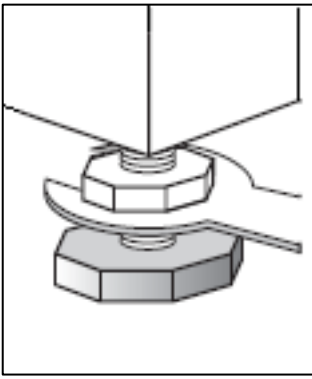


- ✓ Once leveled correctly, you should tighten the lock nut back up on each of the washing machine feet using a spanner.

**IMPORTANT:** When the washing machine is positioned in the location where it will be used. Make sure that all four feet are resting firmly on the floor, by pressing down on each corner and checking that the appliance stands still.


### Connecting to the mains water supply

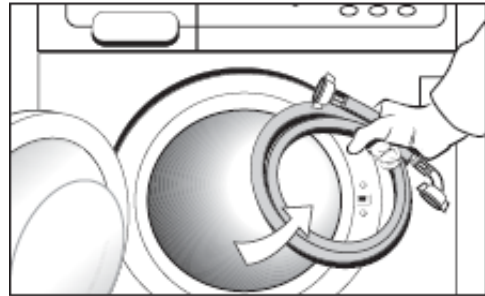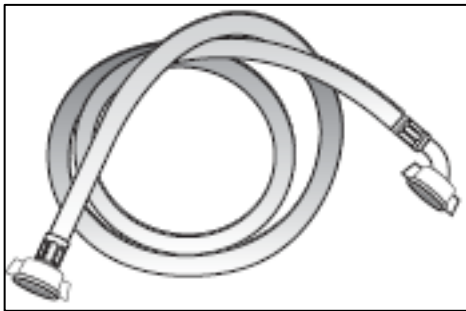

- ✓ The water inlet hose will be inside the drum of your washing machine, when you receive the appliance.

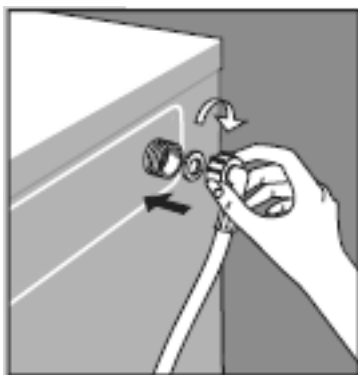

- ✓ Connect and fully tighten the inlet hose to the threaded inlet valve that is located at the rear of the washing machine. You should connect the end with the right angle connector on it to the back of your appliance.

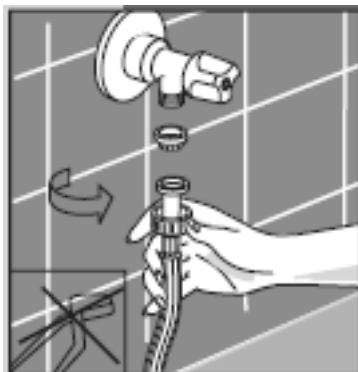


- ✓ Connect the other end of the inlet hose to your mains water supply

- ✓ **IMPORTANT:** There should be a filter sitting inside the end of the inlet hose that connects to your mains water supply. The inlet hose may leak if this filter is missing. This filter is supplied with the appliance, you should contact Baumatic to obtain one, if it is missing.
- ✓ Tighten the inlet hose to your mains supply fully, but do not over tighten as this may distort the filter that sits in the end of the inlet hose.
- ✓ Test for any leaks.


<p><b>IMPORTANT:</b> Minimum mains water pressure required: 0.5 bar Maximum mains water pressure allowed: 10 bar</p>
--

### Water outlet

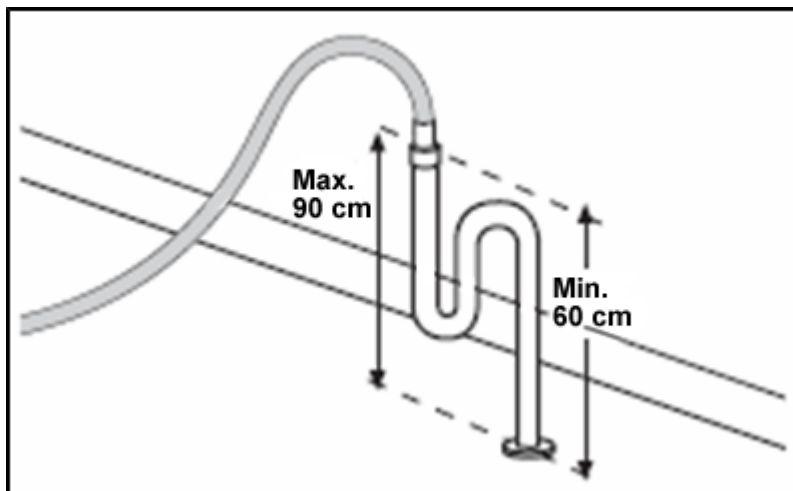


- ✓ Secure the drain hose, so that it cannot move whilst the washing machine is in use.
- ✓ Place the end of the drain hose on your drain pipe. Push it a short way down into your drain pipe.
- ✓ **IMPORTANT:** Do not insert the drain hose too deeply into the water pipe, as this may cause siphoning.
- ✓ **NEVER EXTEND THE DRAINAGE HOSE FROM ITS ORIGINAL LENGTH.**

## Power supply

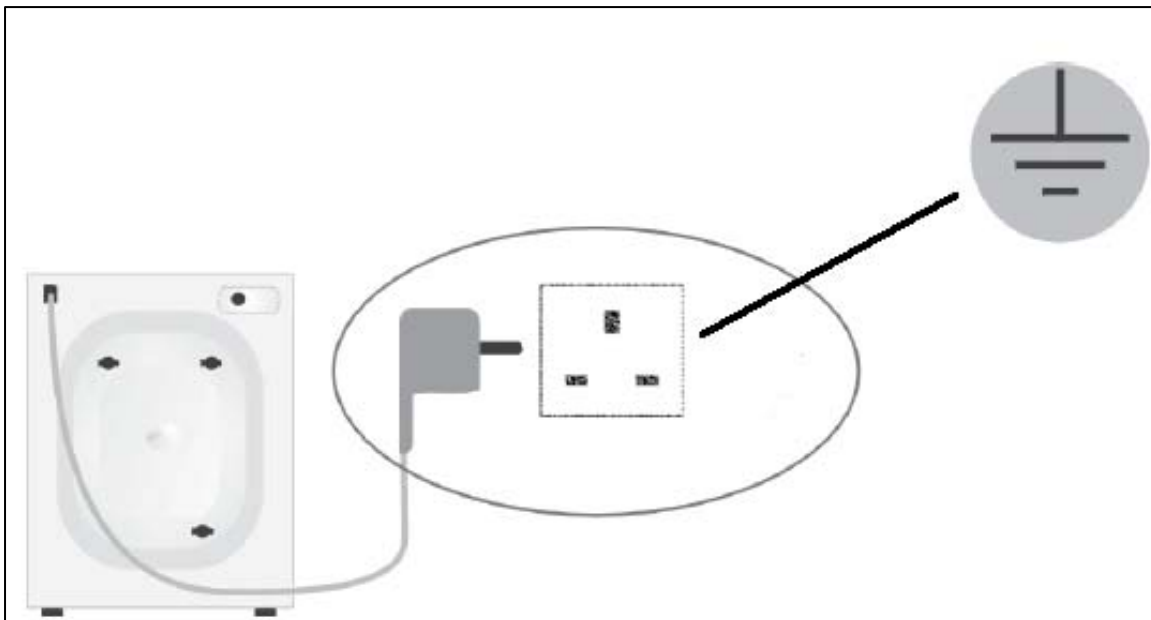

- ✓ **IMPORTANT:** The electrical socket must still be accessible once the appliance is installed.

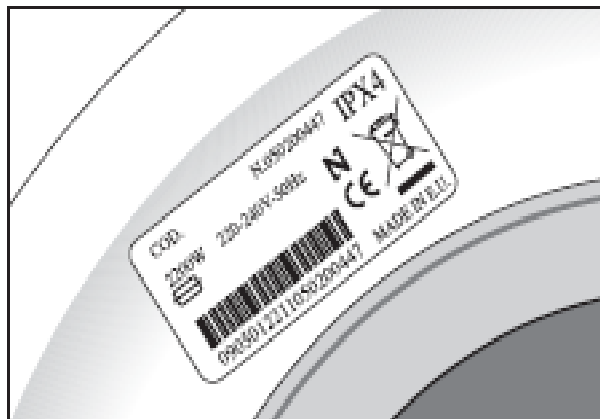

- ✓ Consult the rating plate, located on the back of the appliance **BEFORE** making the electrical connections. Ensure that the voltage reaching the plug, is the same as that on the rating plate.

- ✓ **DO NOT REMOVE THE RATING PLATE AS THE INFORMATION ON IT IS IMPORTANT.**
- ✓ The moulded plug that is supplied with the appliance must be placed into an earthed and insulated socket.
- ✓ Broken or damaged power leads must only be replaced by a suitably qualified person. A power lead of a similar type must be used in replacement.
- ✓ **IMPORTANT:** We do not recommend that this appliance is connected to an extension lead.

## Before first use maintenance wash

- When your washer dryer has been correctly installed, we recommend that you perform a maintenance wash cycle.
- This will check that all aspects of the installation are correct; it will also remove any deposits that may have been left on the drum by the manufacturing process.
- Select the Cotton 90°C wash program.
- A small quantity of detergent should be used during this maintenance wash.

### Certificate of compliance

Compliance with the following Directives: 73/23/EEC, 89/336/EEC, 92/75/EEC  
The Manufacturer declares that its product complies with the general safety, hygienic and environmental protection requirements pursuant to the European Community Directives and that the specific documents applicable to the said product, especially the European Community Declaration of Conformity issued by the manufacturer may be viewed in offices of the competent authorities and may be obtained through the Manufacturer.



## Troubleshooting chart

<b>Problem</b>	<b>Checkpoint</b>
<ul style="list-style-type: none"> <li>○ The washer will not operate at all.</li> </ul>	<ul style="list-style-type: none"> <li>○ Is there a power failure?</li> <li>○ Is the power cord correctly connected to the electrical outlet?</li> <li>○ Did you turn on the power?</li> <li>○ Did you press the On/Off button?</li> <li>○ Is there the correct amount of laundry in the washer?</li> </ul>
<ul style="list-style-type: none"> <li>○ Water is not entering the drum.</li> </ul>	<ul style="list-style-type: none"> <li>○ Did you connect the inlet hose and open the water tap fully?</li> <li>○ Is the inlet hose or the water tap frozen?</li> <li>○ Is the water supply shut off?</li> <li>○ Is there any foreign object blocking the filter that sits in the inlet hose?</li> </ul>
<ul style="list-style-type: none"> <li>○ The washer will not drain.</li> </ul>	<ul style="list-style-type: none"> <li>○ Is the drain hose frozen or blocked by dirt?</li> <li>○ Is the drain hose kinked or deformed?</li> <li>○ Is the end of the drain hose immersed in water?</li> <li>○ Is there excessive dirt inside the drain filter?</li> </ul>
<ul style="list-style-type: none"> <li>○ The washer will not spin.</li> </ul>	<ul style="list-style-type: none"> <li>○ Are the clothes in the drum collected on one side?</li> <li>○ Is the washer installed on an uneven floor or is there serious vibration?</li> <li>○ Is the door open?</li> </ul>
<ul style="list-style-type: none"> <li>○ The washer will stop during spinning.</li> <li>○ Spinning is insufficient.</li> </ul>	<ul style="list-style-type: none"> <li>○ Is the filter of the drain pump clogged?</li> <li>○ Is the drain pump operating?</li> <li>○ Is the drain hose placed higher than 90 cm above the floor?</li> </ul>
<ul style="list-style-type: none"> <li>○ Vibrating and noisy</li> </ul>	<ul style="list-style-type: none"> <li>○ Is the washer installed on an uneven floor?</li> <li>○ Have all of the transit bolts been removed?</li> </ul>



**IMPORTANT: If your appliance appears not to be operating correctly, then you should disconnect it from your mains supply and then contact the Baumatic Service Department on telephone number (0118) 933 6911.**

**DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF.**

Please note that if an engineer is asked to attend whilst the product is under guarantee and finds that the problem is not the result of an appliance fault, then you may be liable for the cost of the call out charge.

**The appliance must be accessible for the engineer to perform any necessary repair. If your appliance is installed in such a way that an engineer is concerned that damage will be caused to the appliance or your kitchen, then he will not complete a repair.**

**This includes situations where appliances have been tiled in, sealed in with sealant, have wooden obstructions placed in front of the appliance, like plinths. Or any installation other than the one specified by Baumatic Ltd. has been completed.**

Please refer to the conditions of guarantee that appear on the warranty card that you receive with the appliance when it is delivered.

## General troubleshooting

### Water under the washer dryer

- Tighten the drain pump filter.
- Check the drain and inlet hose and make sure that they are both fully tightened.

### Washer dryer vibrates during the spin cycle

- Check that the transport locking devices have been removed (see installation instructions).
- Make sure that the washing machine is installed on a flat and level floor.
- Ensure that all four feet are resting firmly on the floor, by pressing down on each corner and making sure that the appliance is stable.
- If it is unstable then follow the "Positioning and leveling the appliance" section.

### Poor spin results

- Clean the drain pump (see "Cleaning the drain pump filter" section).

### Water in the detergent dispenser

- Although there will be some water residue left in the detergent drawer after a wash cycle has completed. If the drawer is full of water then you may need to clean the detergent drawer.

**IMPORTANT: Your appliance has an unbalance control system. If this system detects that the washload is unevenly distributed inside the drum. Your washer dryer will try to redistribute the load before spinning. If after several attempts it is unable to redistribute the washload, then the appliance will either spin at a slower speed or skip the spin cycle and drain.**

**Uneven load distribution can be caused by too large a wash load or too small a wash load. It can also occur if a single item is washed inside the appliance.**



*You will be mine ...*

**United Kingdom**

Baumatic Ltd.,  
Baumatic Buildings,  
6 Bennet Road,  
Reading, Berkshire  
RG2 0QX  
United Kingdom

**Sales Telephone**

(0118) 933 6900

**Sales Fax**

(0118) 931 0035

**Service Telephone**

(0118) 933 6911

**Service Fax**

(0118) 986 9124

**Spares Telephone**

(01235) 437244

**Technical Advice Telephone**

(0118) 933 6933

**E-mail:**

sales@baumatic.co.uk  
technical@baumatic.co.uk

**Website:**

www.baumatic.co.uk

**Republic of Ireland**

01- 6266 798

**Czech Republic**

Baumatic CR spol s.r.o.  
Amperova 495  
46215, Librec  
Czech Republic

+420 800 185 263

www.baumatic.cz

**Slovak Republic**

Baumatic Slovakia, s.r.o.  
Skultetyho 1  
831 04 Bratislava 3  
Slovakia

+421 255 640 618

**Germany**

Baumatic Gmbh  
Janderstrasse 9  
Mannheim, 68199  
Germany

+4962 112 9190

www.baumatic.de

**Italy**

Baumatic Italia S.R.L.  
Via Caltana 129  
Campodarsego (Padova), 35011  
Italy

+3904 9920 2297

www.baumatic.it

**Holland**

Baumatic Benelux B.V.  
Grindzuigerstraat 22  
1333 MS ALMERE  
The Netherlands

+3136 549 1555

www.baumatic.nl









**Baumatic®**

[www.baumatic.com](http://www.baumatic.com)