

# ENTerview

VIDEO DOOR ENTRY SYSTEM  
OPERATING INSTRUCTIONS



# INSTALLATION GUIDE

## INTERVIEW 5

Four handsets maximum per system



Two audio only handsets maximum per system

Each handset requires supplied PSU


Door release requires additional timer controlled power supply  
(Recommended EVBPS)

Recommended cable CAT5 4 core minimum  
70 Meters maximum total cable distance



## EV5 HANDSET

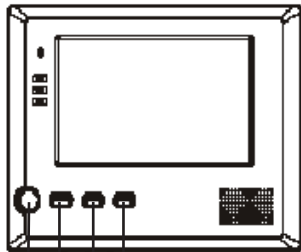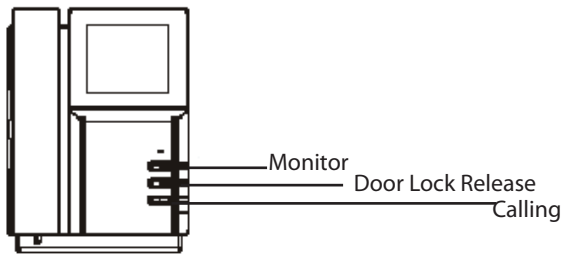


Monitor  
Calling  
Door Lock Release  
Talking

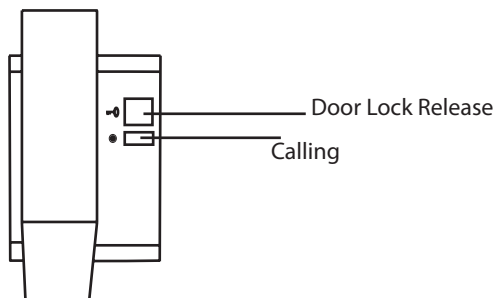


## EV5 CAMERA

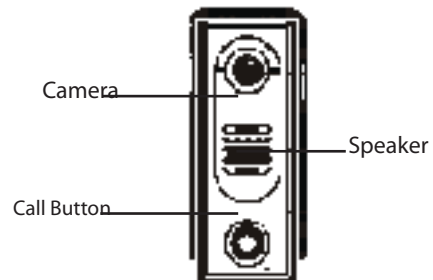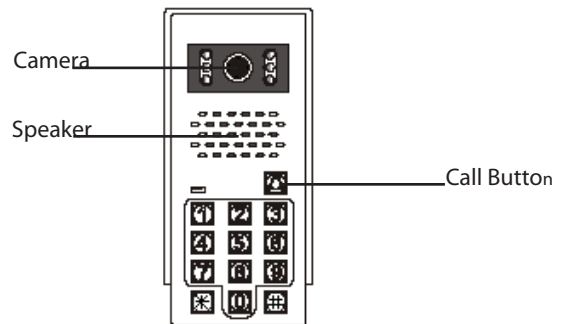


# WIRING CONFIGURATION

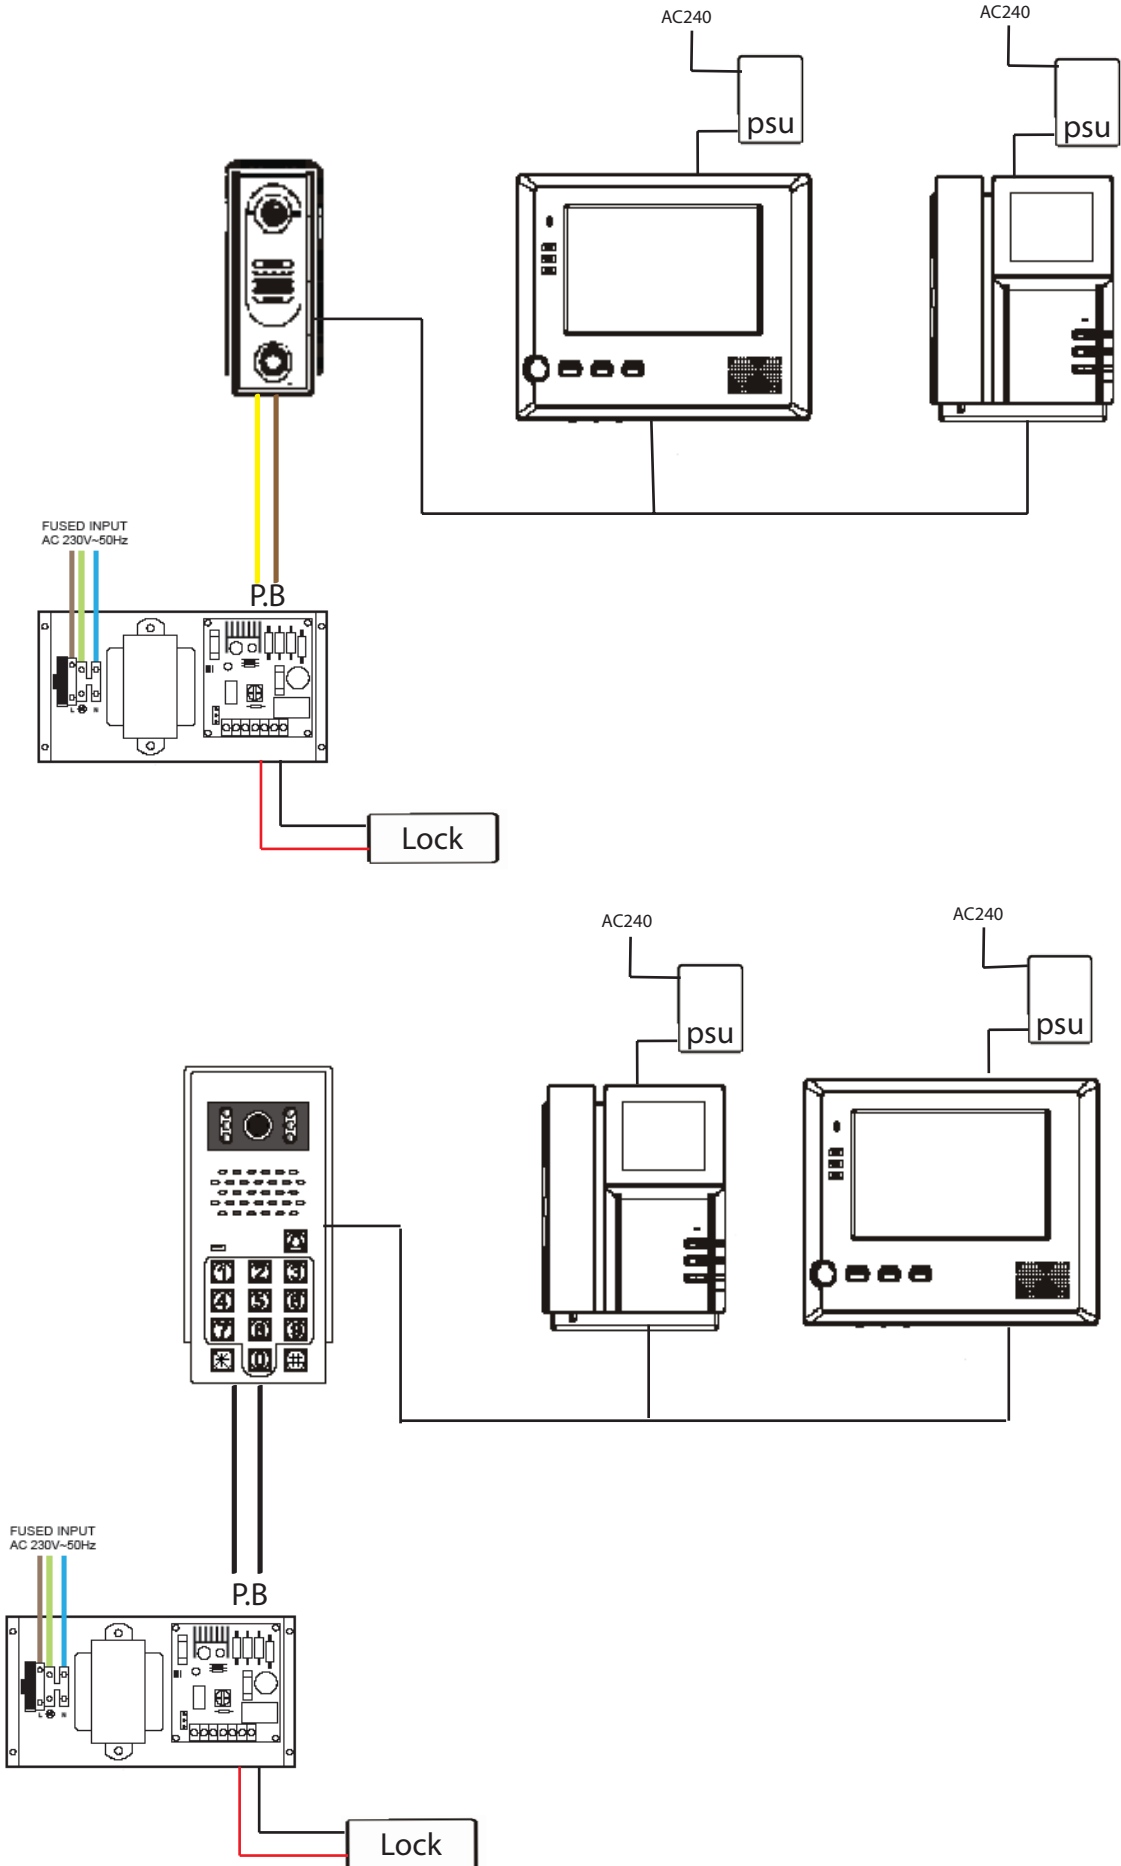


# WIRING CONFIGURATION (MAXIMUM)

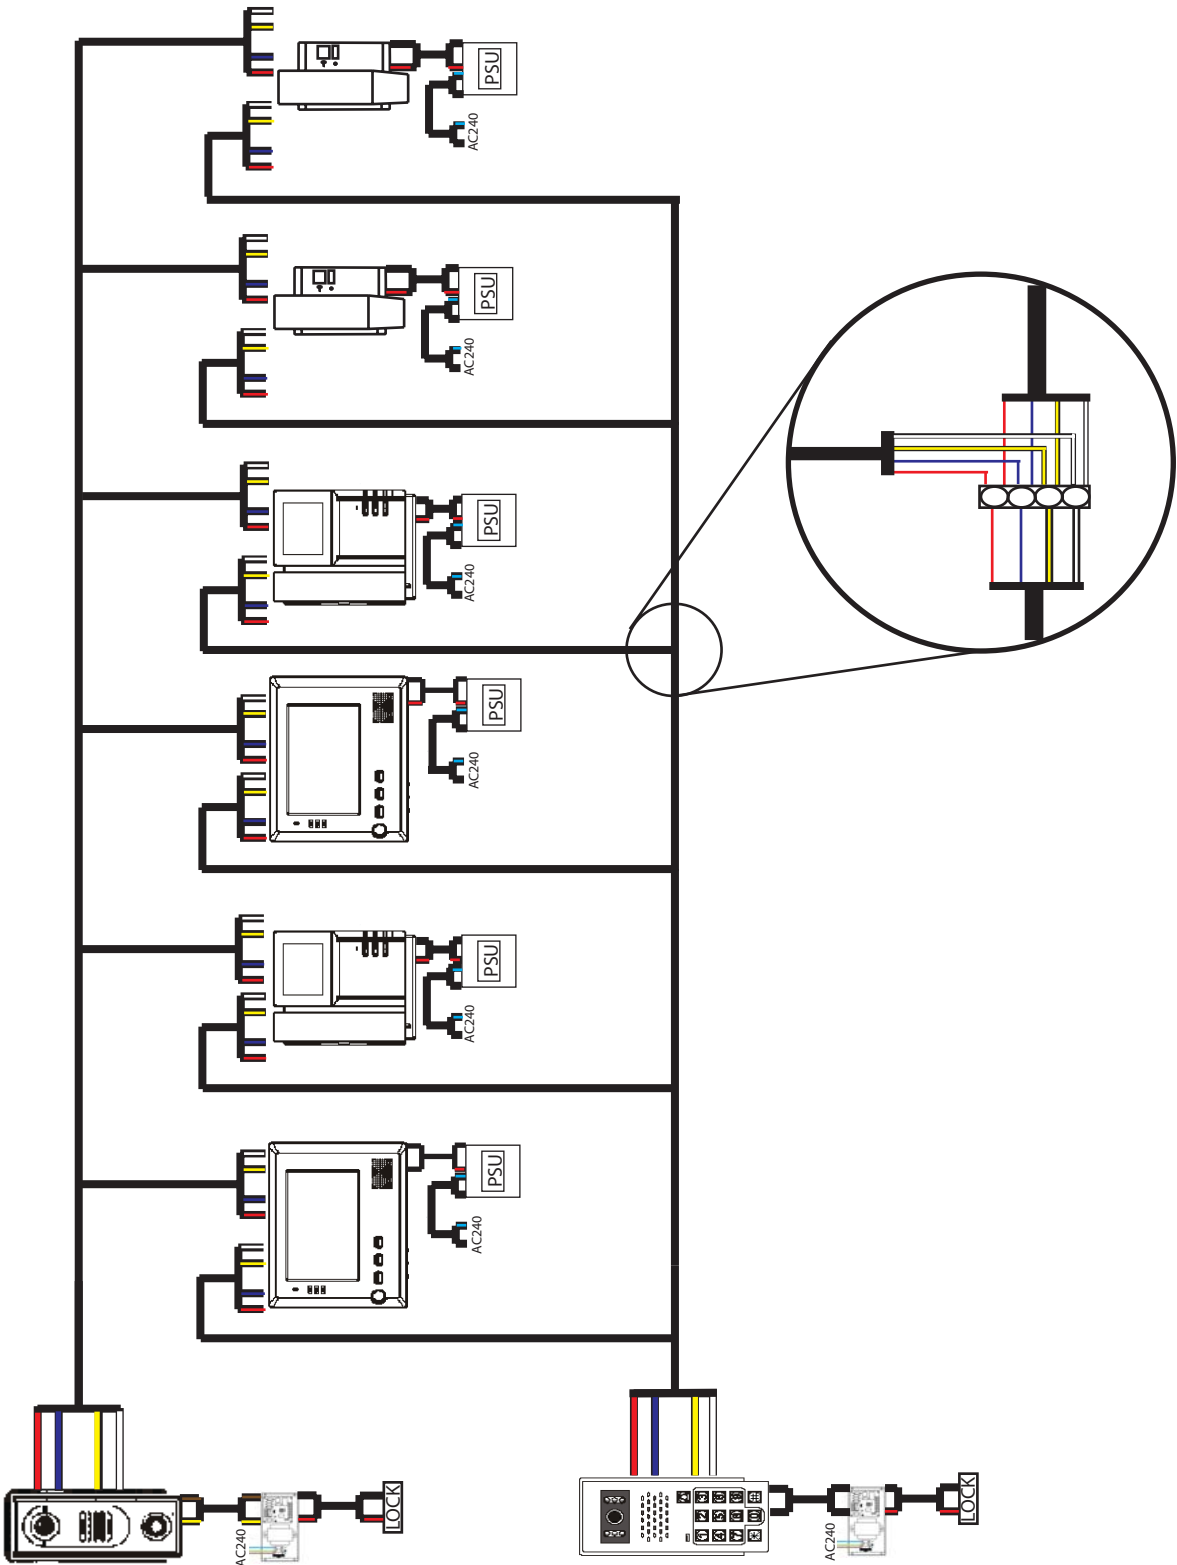


# WIRING CONFIGURATION (2 DOOR STATION)

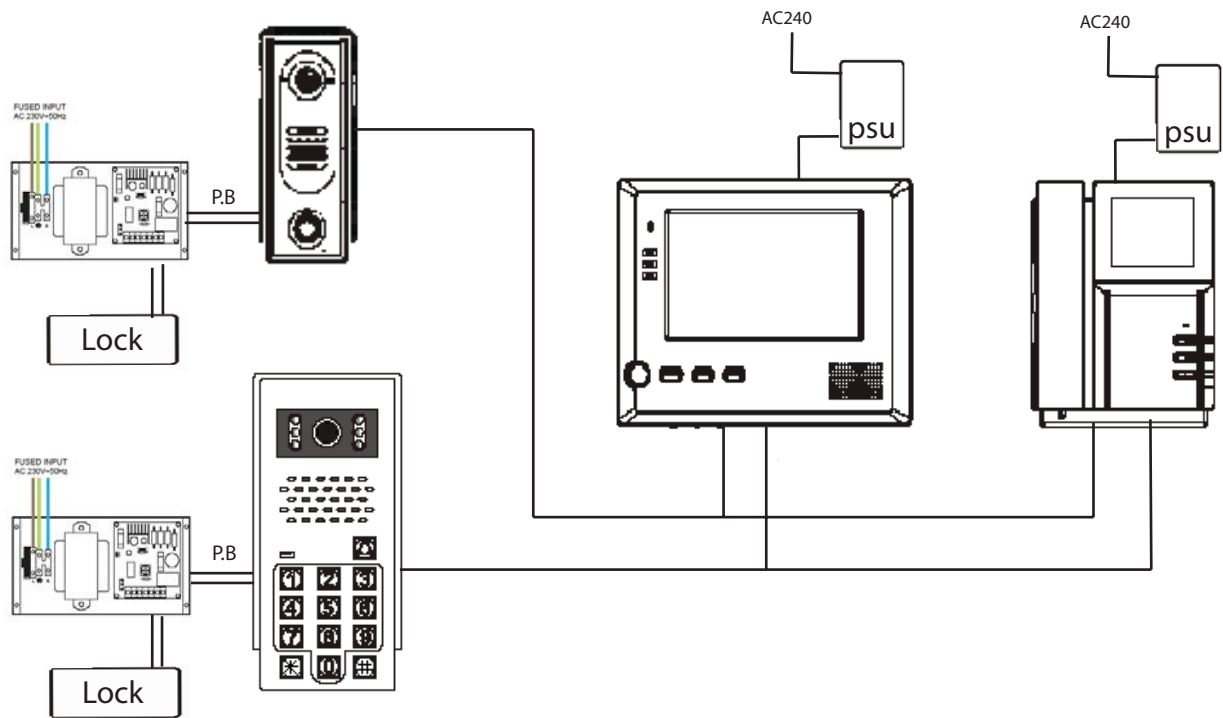

## EV5KP WIRING

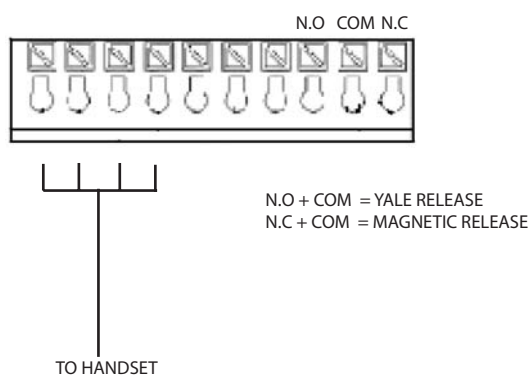

## EV5 HANDSET CONNECTIONS

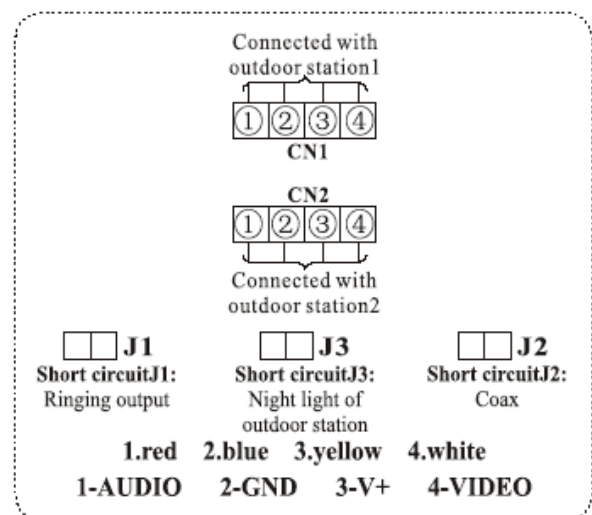

# KEYPAD COMMAND

Default master code: 1234

Entering programming mode

- 1: Press the \* then 4 digit master code
- 2: If successful three tones will sound and the LED will flash
- 3: Press \* to exit programming

Adding user codes

- 1: Enter programming mode
- 2: Input the code group 01-31 for normal operation ,  
32-40 for latching mode.
- 3: Enter the 4 digit code, if successful three tones sound  
if not 2 tones sound.
- 4: Press\* to exit

Deleting a user code

- 1: Enter programming mode
- 2: Enter group code 01-40
- 3: Press # to delete code
- 4: If successful three tones will sound
- 5: Press \* to exit

Deleting a code from an unknown group

- 1: Enter programming mode
- 2: Press # two tones will sound
- 3: Input 4 digit code to be deleted
- 4: Three tones will sound if successful
- 5: Press \* to exit

Deleting all codes

- 1: Enter programming mode
- 2: Press # two tones will sound
- 3: Press # again to hear a further two tones
- 4: Press # seven times to default all codes and settings  
( the master code will remain)
- 5: The system will resume after five seconds and tones

Changing the master code



- 1: Down power the unit
- 2: Hold \* and power up the unit , a long tone will sound
- 3: When the tone stops, a short tone will sound and input  
the new 4 digit programming code

Set the lock time ( if not using EVBPS)

- 1: Enter programming
- 2: Enter 00
- 3: Enter the lock/delay operation time (01-99 seconds)
- 4: Press \* to exit

# INSTALLATION GUIDE



EV5CAM  
EV5KP

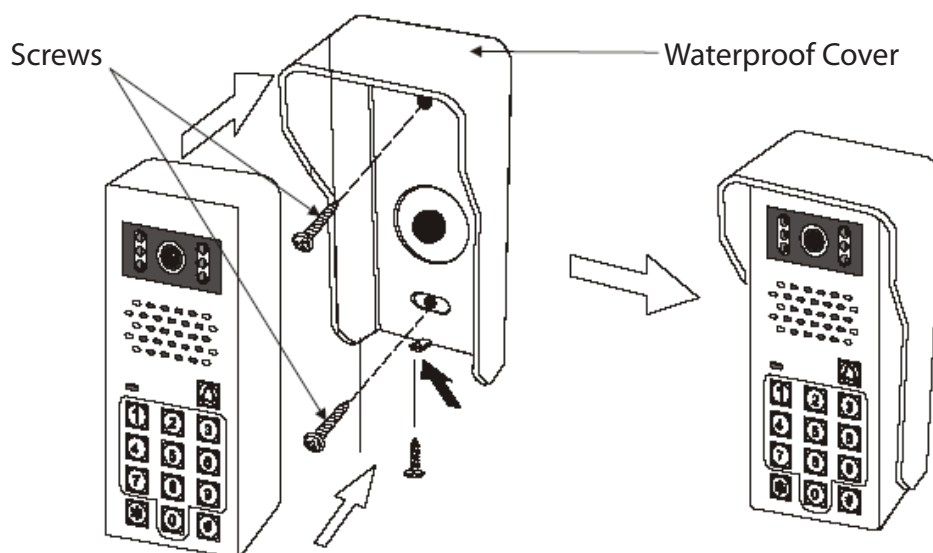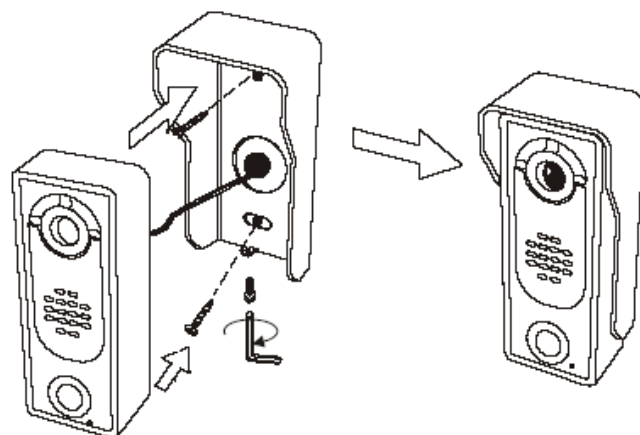

Recommended installation height 150cm

# INSTALLATION GUIDE

EVH5  
EVH5-HF

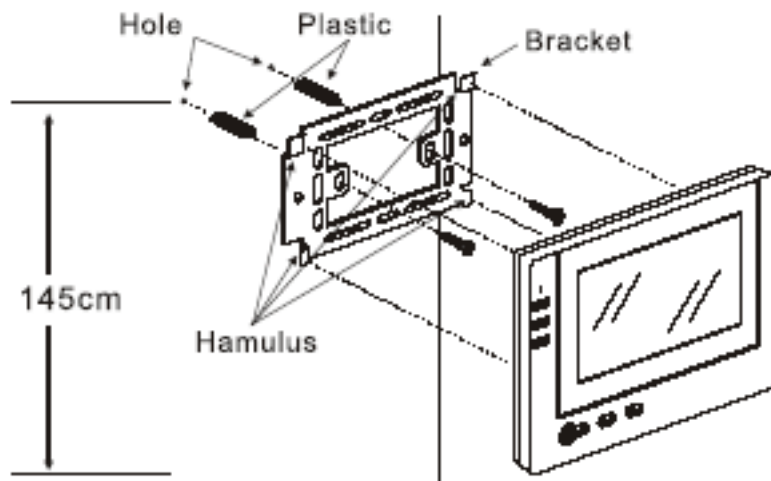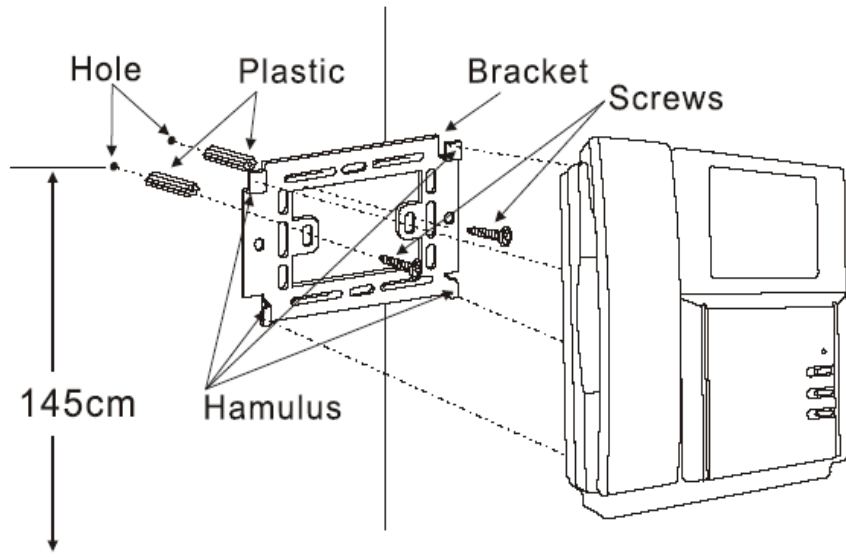



## TECHNICAL SPECIFICATION

Monitors	Power	Video Output	Operating Temperature	Consumption	Dimensions (mm)
Enterview 5	14.5 DC	1-1VP-P 750hm B/W PAL	-10/55°C	800ma	205x220x50
Enterview 5C	14.5 DC	1-1VP 750hm PAL	-10/55°C	800ma	205x220x50
Enterview 5C-HF	14.5 DC	1-1VP 750hm PAL	-10/55°C	800ma	240x175x38

Cameras	Power (FROM MONITOR)	Video Output	Min Illumination	Operating Temperature	Consumption	Dimensions (mm)
Enterview 5 CAM	14.5 DC	1-1VP-P 750hm B/W PAL	1 LUX	-10/55°C	150ma	55x130x40
Enterview 5 C-CAM	14.5 DC	1-1VP 750hm PAL	1 LUX	-10/55°C	150ma	55x130x40
Enterview 5 KP	14.5 DC	1-1VP-P 750hm B/W PAL	1 LUX	-10/55°C	150ma	75x190x45
Enterview 5 CKP	14.5 DC	1-1VP 750hm PAL	1 LUX	-10/55°C	150ma	75x190x45

## ADDITIONAL ACCESSORIES

**EV-BPS** 12VDC 2 amp Multi output boxed power supply

**EV-EBG** Emergency break glass

**EV-EXIT** Push to exit button

**EV-ML-250** Electromagnetic lock

**EV-ML-250-MON** Monitored electromagnetic lock



**Technical Support 01527 51 51 45**

**[www.espuk.com](http://www.espuk.com)**