## Installation Sheet ) KSR99112 Sensor Specification & Installation

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintainence.



## IP66 🗆 🕊 🤆


## **Instructions**


Please note mains must be isolated before sensor is installed

- Remove socket cover off the top of the street post head by turning anti clockwise (Fig. 1).
- Fit Sensor by lining up locking Pins into socket and twist clockwise to lock into street post (Fig. 2).
- Removal is reverse of above step.




Top View

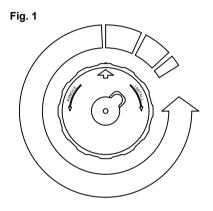

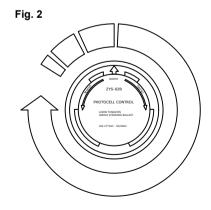


Operating Voltage	100-277Vac 50/60Hz
Rated Load	1200W @ 277Vac
Rated Current	10A
Operations at Rated Load	>10000 On/Off
Operating Temperature	-40°C~60°C
IP Rating	IP66
Power Consumption	<1W
Relative Humidity	5%~95%
Turn On	<10 Lux
Turn Off	>60 Lux

**Sensor Specification** 

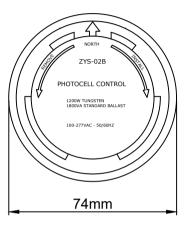

Side View

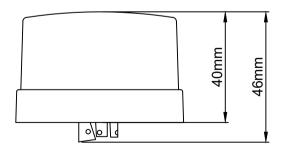



KSR Lighting Aftersales: 023 92 674343 E-mail: aftersales@ksrlighting.com

## KSR Lighting Ltd, Optimum House, Beeding Close, Southern Cross Trading Estate, Bognor Regis, West Sussex, PO22 9TS.

19.07.2024MAC